

Point Anywhere Remote Control Set Up Instructions

Program using Auto Code search

The Auto Code Search method will scan through all the codes to find one that works with your TV or other equipment.

1. Turn on the equipment to be programmed.
2. Point the remote control at the selected device.
3. **Press and hold** a mode key (TV, DVD, or AUX) along with the **ENTER** key. **Hold both keys** for one second, and then **release**. The **four mode keys** on the remote control **flash twice** to indicate you are in search mode.
4. Search by pressing the **SCAN\FF** key repeatedly until the equipment turns OFF. (The selected mode key will flash once for each press of the **SCAN\FF** key.) Pause briefly between each key press to allow your device enough time to respond.
5. Press the **POWER** button on the remote to turn the device back on.
 - If the equipment does not turn off and you have searched all available codes, the selected mode key will **flash 8 times**. If this happens, please start over at **step 2 above**, or proceed to **Section B below** (Manually Program Equipment Codes).
 - If the device does not turn on, you may have pressed the **SCAN\FF** key too many times. Press the **REW\SCAN** key to scan backwards, and test the **POWER** button again.
6. Check **VOLUME** and **MUTE**. Do not test using **REW\SCAN**, **SCAN\FF**, **EXIT**, **CHANNEL (+ and -)**, **FWD**, or number keys. If there is any problem with any of the keys, press the **SCAN\FF** button, and search until you find a code that will operate all the functions properly.
7. Press the **ENTER** key to save the programming. The appropriate mode key will give a **long flash** with a **long beep**, indicating successful programming.

Program using the Learn Code function

To use Learn Code function, you must have the original remote for the equipment you wish to program.

1. Press and hold the **LEARN** key until the four mode keys flash in sequence, and then release.
2. **Press** the **mode** key for the equipment you want to control; the other mode keys will stop flashing. The red **LED SELECT KEY TO LEARN** indicator on your U-verse remote will flash.
3. Place the Point Anywhere remote control head-to-head with your original remote (about 1" - 2" apart).
4. Press the key you want to program on your RF remote control once. (The first key programmed should be the **POWER** key.) After pressing the key to program, the green **READY TO LEARN** LED indicator will light.
5. **Press and hold** the corresponding key you want programmed from the original remote until the RF remote control emits a long beep, indicating it has **learned** the desired command. (For the first key, this should be the **POWER** key.)

6. **Press** the **next** key you want to program on your RF remote control once (**VOLUME + or - or MUTE**).
7. **Press and hold** the corresponding key you want programmed from the original remote until the RF remote control emits a **long beep**, indicating it has **learned** and **saved** the key command.
8. To program additional keys, repeat steps 6 and 7.
9. To save the learning, press the **LEARN** key. This will also exit Learning.